
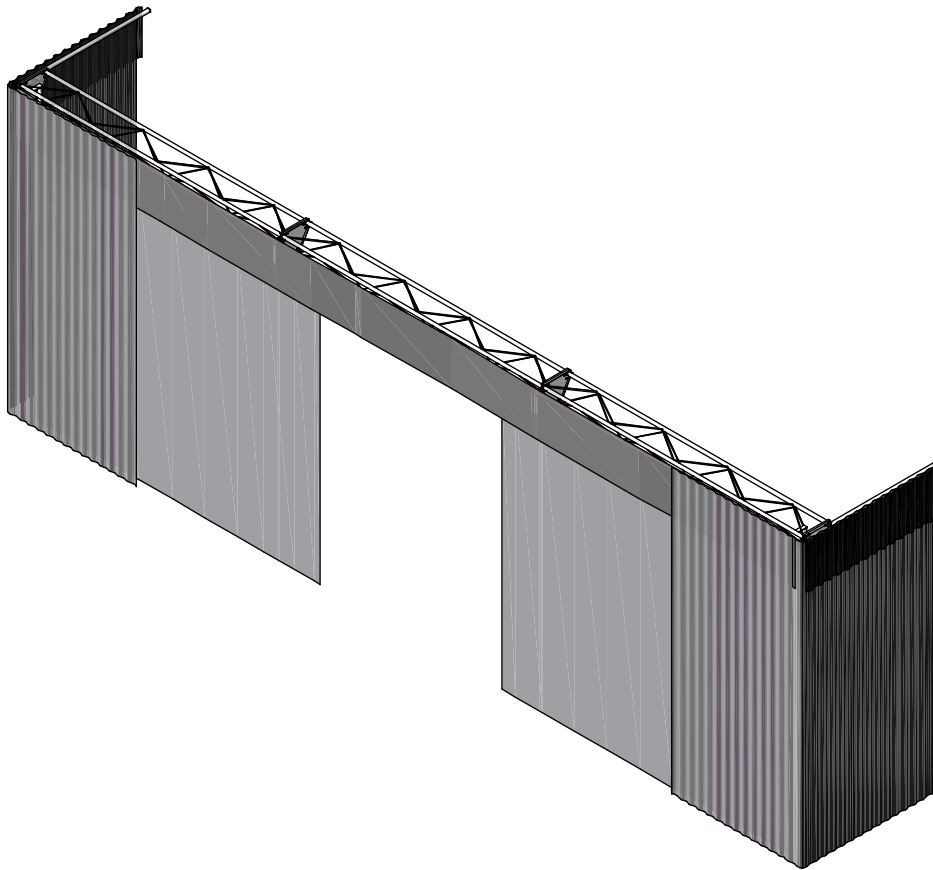
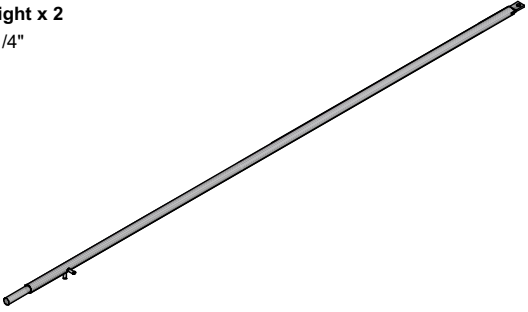
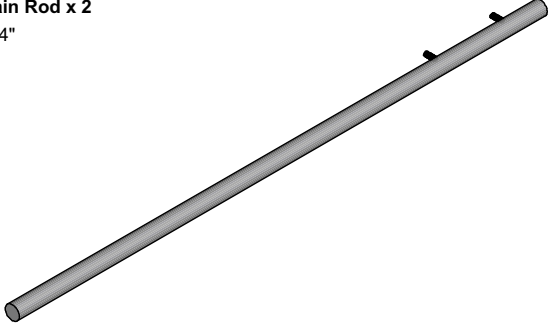
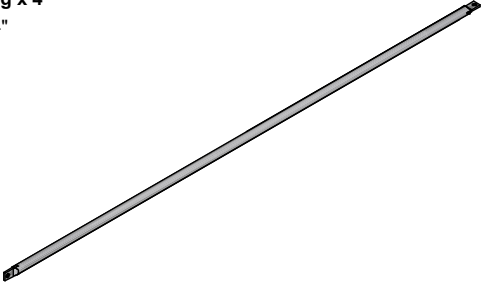
 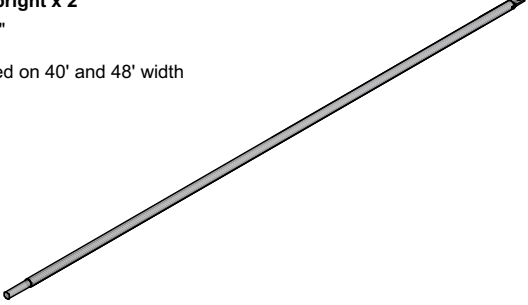

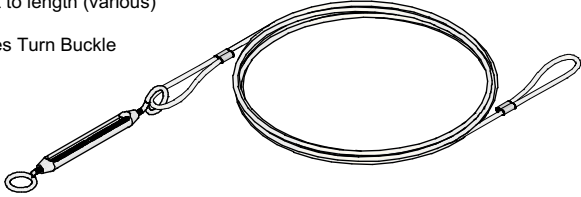
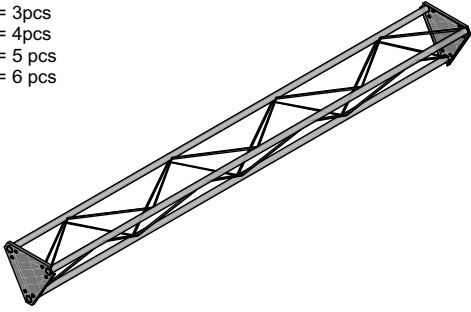
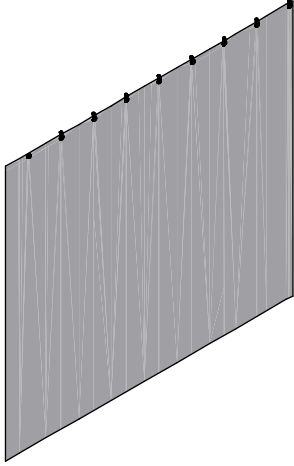
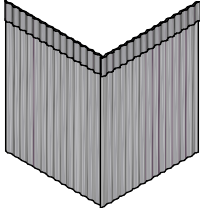


# Setup and Specifications Manual


## Front Drapery System

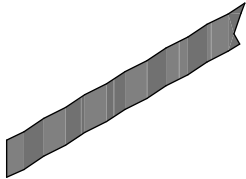


<p><b>Main Upright x 2</b> 93" x 1 1/4"</p> 	<p><b>Side Curtain Rod x 2</b> 48" x 1 1/4"</p> 
<p><b>Support Leg x 4</b> 87" x 1 1/4"</p> 	<p><b>Optional Upright x 2</b> 93" x 1 1/4"</p> <p>** Only used on 40' and 48' width</p> 
<p><b>Front Drapery Clamp x 6 (8 for 40/48' width)</b> Includes 3/8 x 1 Bolt and 3/8 Nyloc Nut</p> 	<p><b>Curtain Cable x 1</b> Pre cut to length (various) Includes Turn Buckle</p> 
<p><b>Truss</b> 24' width = 3pcs 32' width = 4pcs 40' width = 5 pcs 48' width = 6 pcs</p> 	<p><b>Curtain x 2</b> Width various Includes Snap Hooks</p> 
<p><b>Side Valance and Side Curtain x 2</b></p> 	<p><b>Front Valance x 1</b> Width various</p> 

1


## Stage Right Truss

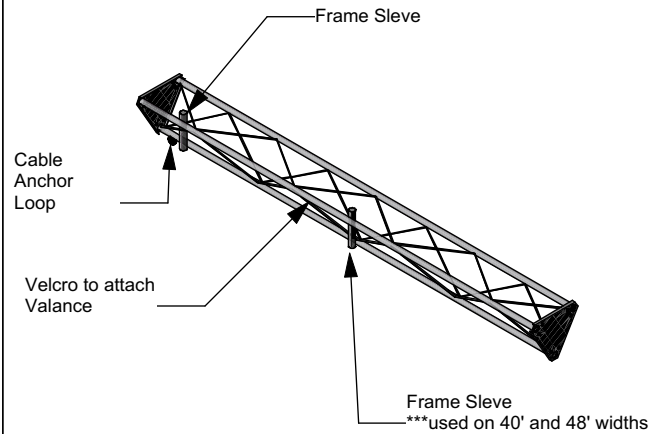

2

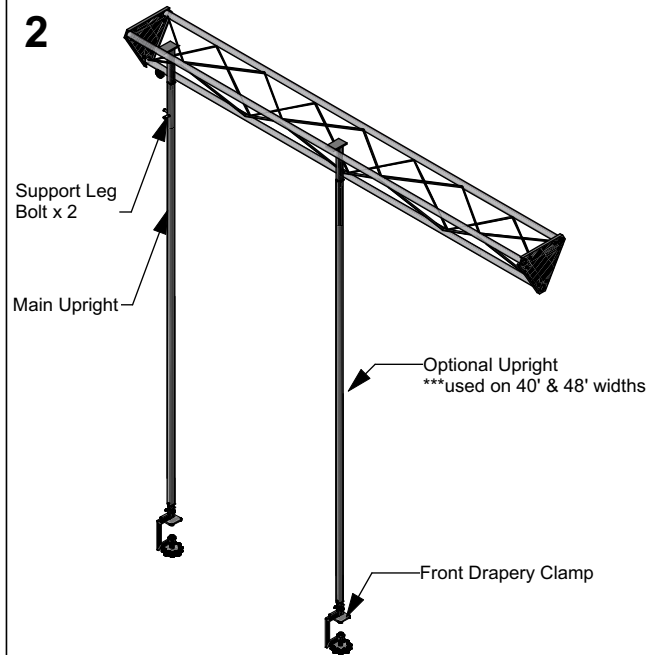

3

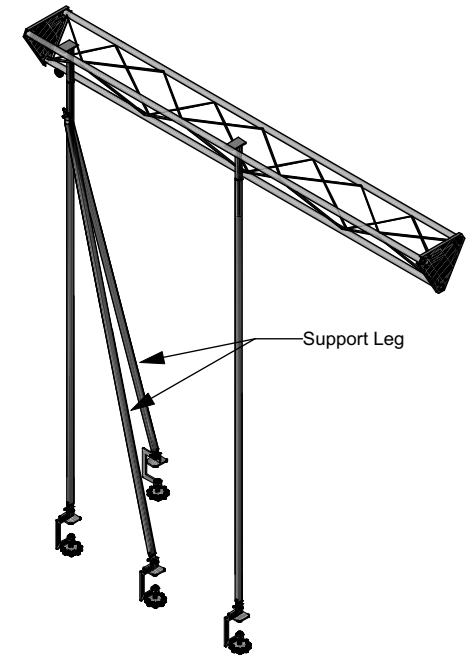


4




## Instructions

1. Assemble truss system (see Truss Detail)
2. Install Main Upright and if equipped ( 40' or 48') the Optional Upright as shown. The Main Upright will have 2 x 3/8" bolts to attach the angled Support Legs. Orient the Upright so there is one bolt facing towards the audience and one facing the outside of the stage. Install clamps on to the stage and bolt to uprights using 3/8" hardware supplied.
3. Attach Support Legs to the Main Upright and finger tighten nut. Install clamps on to stage but do not tighten. Attach Support Leg to Clamp and again, do not tighten. Using a level make sure the Main Upright is straight then tighten all clamp hardware and Support Legs to the Main Upright.
4. Install Side Curtain Rod to Truss with velcro facing out.


1

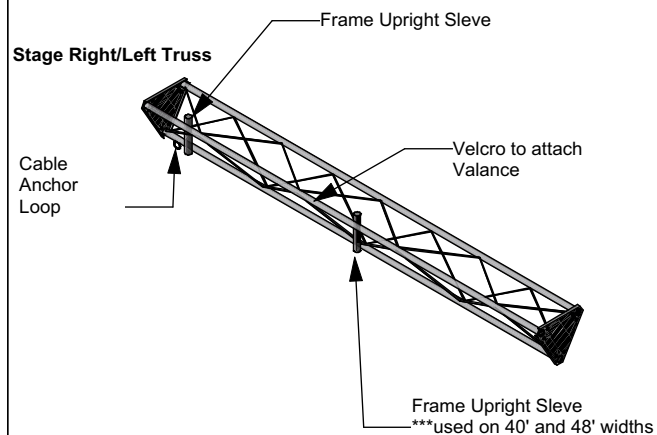


Center Truss

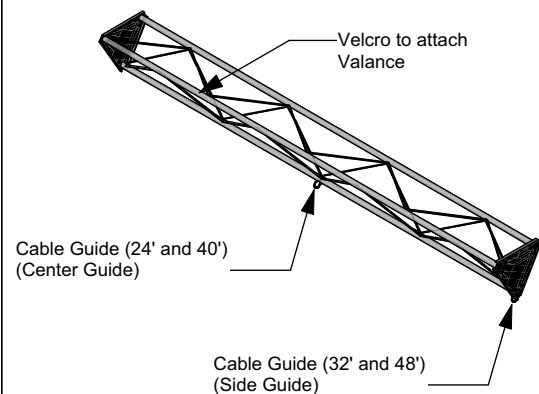

Standard Truss

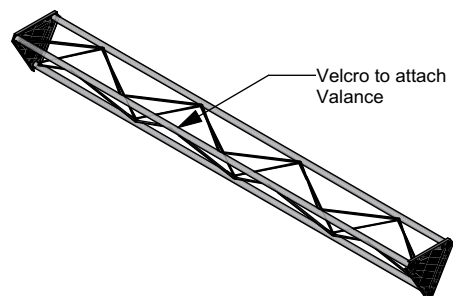


2

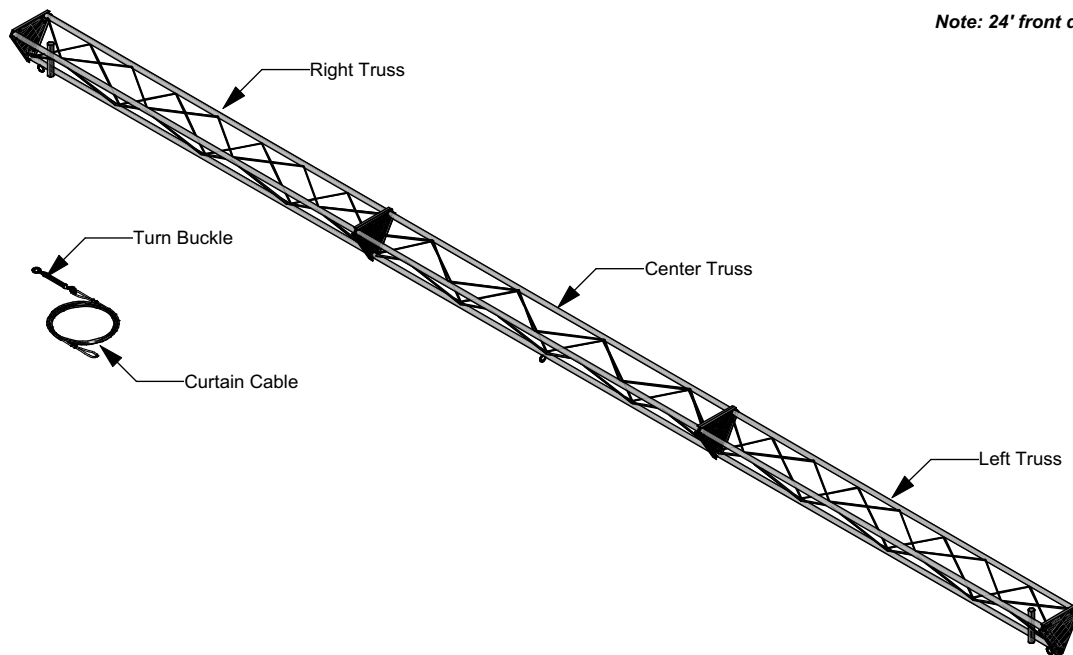


Note: 24' front drapery shown

3

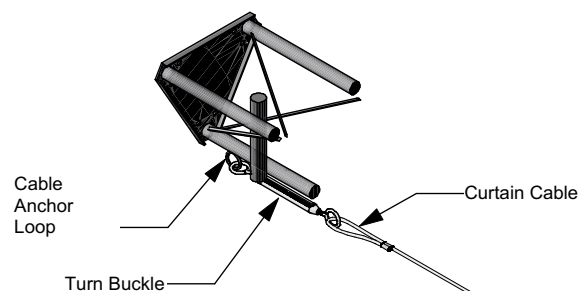

4

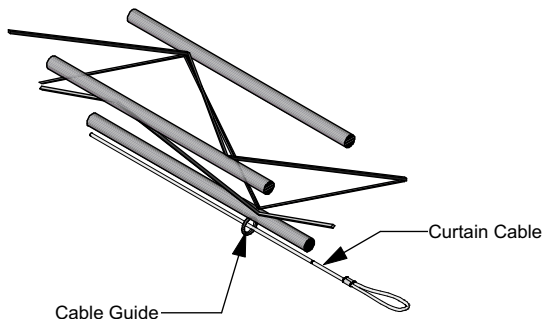

### Instructions

1. Identify Truss sections and lay out in order. (See fig 1)
2. Using 3/8 x 1 bolts and 3/8 locking nuts bolt together truss sections. Orient truss sections so that the Anchor Loop and guide is to the bottom and the velcro is facing towards the audience.
3. Install the Curtain cable. Loosen turn buckle and attach to one of the Cable Anchor Loops (left or right)
4. Feed opposite end of Curtain Cable through the Center Cable Guide and hook onto the opposite (open) Curtain Anchor Loop. Tighten Turnbuckle to take out any sag in the cable.

